

If you are using the Control Panel to replace the Joystick control on your Jimmy Jib remote system, you must read the following...

The Control Panel will work with any model 4 remote system.

The Mini Head/Triangle switch **must** be set in the ***Triangle*** position.

The Focus switch on the Panel **must** be set in the **Stanton Focus mode** for the focus to function.

The Iris control on the Control Box **must** be turned to the middle position (white line on knob in a straight up position) in order for the iris on the panel to function correctly.

The Pan/Tilt Ramping and Speed controls on the panel **will not function** in the ***Triangle Mode***. You will have to use the controls on the control box itself to affect ramping and speed.

The on/off switch on the Panel **does not function** in the ***Triangle Mode***. The Power Light in the Panel comes on when the power on Control Box is turned on.

When the panel is first plugged in, the remote head will probably drift. Make the centering adjustment **on the Panel and not on the control box** as this will insure when you go back to the joystick, you will still have proper centering. Also make sure the Speed control (on the control box) is turned up to maximum and the Ramping control (on the control box) is at the minimum setting. If you change the direction the joystick operates, (Direction Switch on Panel) you will have to readjust the centering.

The Tally on the Panel will not function in Triangle mode

Zoom Centering must be adjusted while the lens switch on the Control Box in the Fujinion position. If it is in the Canon position, zoom will drift and you will be unable to center it. Again, you should pick the direction you want to zoom in before making this adjustment.

You cannot use your old control cable with the Panel.

CONTROL PANEL

1. The Direction Switches control the direction of the device.
2. Changing a direction switch will probably require readjusting the centering control.

